


ADJUSTMENTS


⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

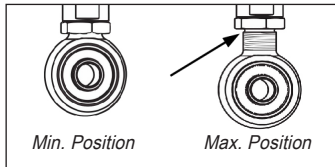

⚠ Warning!

The adjustable end eye/bracket must not be threaded out more than that the groove is fully visible beneath the lock nut. This is maximum length. After adjusting, make sure that the lock nut is tightened (40Nm).

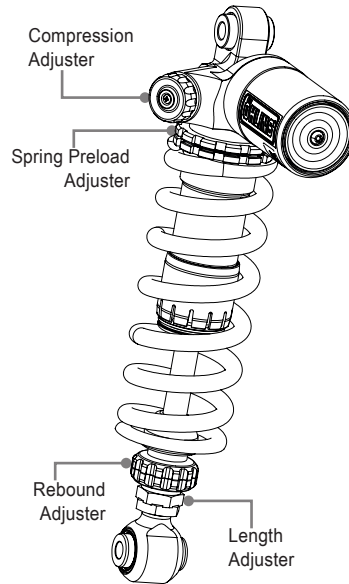

SET-UP DATA

Recommended set-up

Spring Preload..... 13 mm.
 Compression adjuster 12 Clicks
 Rebound adjuster 12 Clicks

Alternative springs

Spring	60293-31	60293-34	60293-39	60293-41
Free spring length [mm]	190	190	190	190
Spring rate [N/mm]	95	100	110	115

Shock absorber data

Length 320 ⁺⁶/₀ mm.
 Stroke 66 mm.

Spring

Part No 60293-36
 Free spring length... 190 mm.
 Spring rate..... 105 N/mm
 Preload adj.range... [0-20] mm

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_KA 744_EN_0
 Issued 2018-02-07

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
 700/937 Moo5, Tambol Nongkhaga,
 Amphur Phantong, Chonburi Province
 20160 Thailand



www.ohlins.com