


Adjustments

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up the shock absorber.

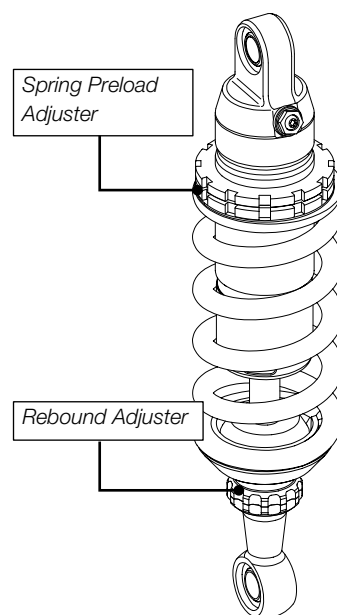

Set-up Data

Recommended set-up

Rebound	12 clicks
Spring Preload	12 mm
Spring Rate	160 N/mm
Spring; Free length	150 mm


Recommended Sag and Ride Height

Free sag (R1-R2)	5-15mm
Ride height (R1-R3)	30-40mm

👁 Read about Free Sag and Ride height in the Öhlins Owner's Manual.

Shock absorber data

Length	306 mm
Stroke	51 mm

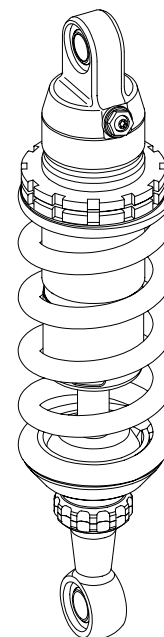

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Kit Contents

	Part No.	Pcs.
Shock absorber	HO 155	1
Sticker Öhlins	00192-01	2
Screw M10x45	00439-02	1
C-spanner	00710-02	1
Memo Notes Sticker	01180-01	1
Owner's Manual	07241-02	1

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact your Öhlins distributor. Please consult your Öhlins dealer if you have any questions regarding the contents in this document.

Part no. HO 155_0
Issued 2011-11-15



Shock Absorber for Honda Hornet 600

HO 155

Mounting Instructions

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com



How to install

Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

When installing, read the Vehicle Service Manual.

1

Place the motorcycle on a stand so that the rear wheel barely touches the ground. The swing arm must be free, so that the suspension is unloaded.

Warning!

Make sure the vehicle is securely supported so that it will not tip.

Note!

Clean the vehicle thoroughly before installing the Öhlins shock absorber.

2

Remove the seat.

2

Remove the lower and upper shock absorber mounting bolts.

3

Remove the shock absorber.

4

Mount the Öhlins shock absorber in reverse order, use the provided screw 00439-02 for the lower mount.

Note!

Lower the motorcycle so that the shock absorber is slightly compressed, before tightening the screws.

8

Reinstall all removed parts in the same way as they were before installation of the Öhlins shock absorber.

Caution!

Make sure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.