



| Kit Contents | | |
|---------------------|---------|-----|
| Description | Part No | Pcs |
| Cables ties 4,8x290 | | 8 |
| Cables ties 3,5x190 | | 4 |
| Adhesive pads | | 6 |
| Cancellation kit | | 4 |

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Cancellation kit, Porsche 911/718

35020-07

Mounting Instructions

MOUNTING INSTRUCTIONS

Front axle Porsche 911 type 991 C2, C4 coupé, convertible

1

Fix the supplied adhesive pad on the cancellation kit.

👁 **Note!**

Adherend must be cleaned and degreased.

2


Fasten the cancellation kit to the vehicle frame and fix it with the supplied cable ties. The assembly position is beside the strut. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

👁 **Note!**

Adherend must be cleaned and degreased.



Right vehicle side

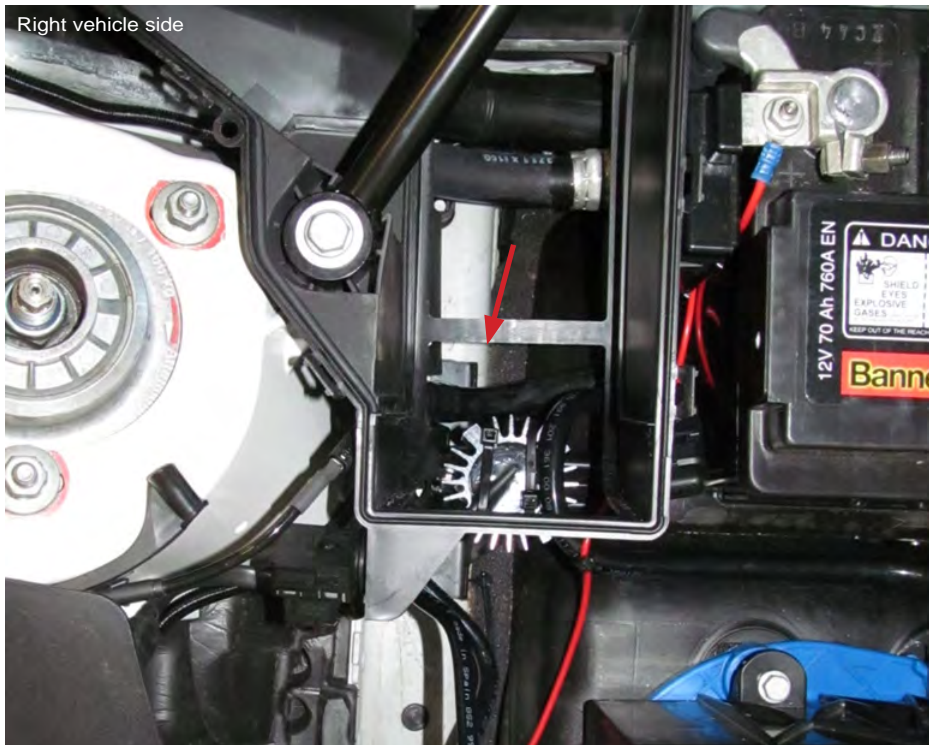

MOUNTING INSTRUCTIONS

3

Fasten the cancellation kit to the vehicle frame and fix it on the wire harness with the supplied cable ties. The assembly position is beside the battery. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

👁 **Note!**

Adherend must be cleaned and degreased.



MOUNTING INSTRUCTIONS

Front axle Porsche 911 Targa type 991

1

Fix the supplied adhesive pad on the cancellation kit.

Note!

Adherend must be cleaned and degreased.

2

Fasten the cancellation kit to the vehicle frame. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

Note!

Adherend must be cleaned and degreased.



Right vehicle side



MOUNTING INSTRUCTIONS

3

Fasten the cancellation kit to the vehicle frame and fix it with the supplied cable ties. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

Note!

Adherend must be cleaned and degreased.



MOUNTING INSTRUCTIONS

Rear axle: Porsche 911 type 991 C2, C4 coupé

1

Fix the supplied adhesive pad on the cancellation kit.

👁 **Note!**

Adherend must be cleaned and degreased.

2

Fasten the cancellation kit to the vehicle frame and fix it with the supplied cable ties. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

👁 **Note!**

Adherend must be cleaned and degreased.



MOUNTING INSTRUCTIONS

3

Fasten the cancellation kit to the vehicle frame and fix it with the supplied cable ties. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

Note!

Adherend must be cleaned and degreased.



MOUNTING INSTRUCTIONS

Rear axle: Porsche 911 type 991 C2, C4 convertible

1

Fix the supplied adhesive pad on the cancellation kit.

Note!

Adherend must be cleaned and degreased.



Assembly position




MOUNTING INSTRUCTIONS

2

Fasten the cancellation kit to the vehicle frame. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

Note!

Adherend must be cleaned and degreased.

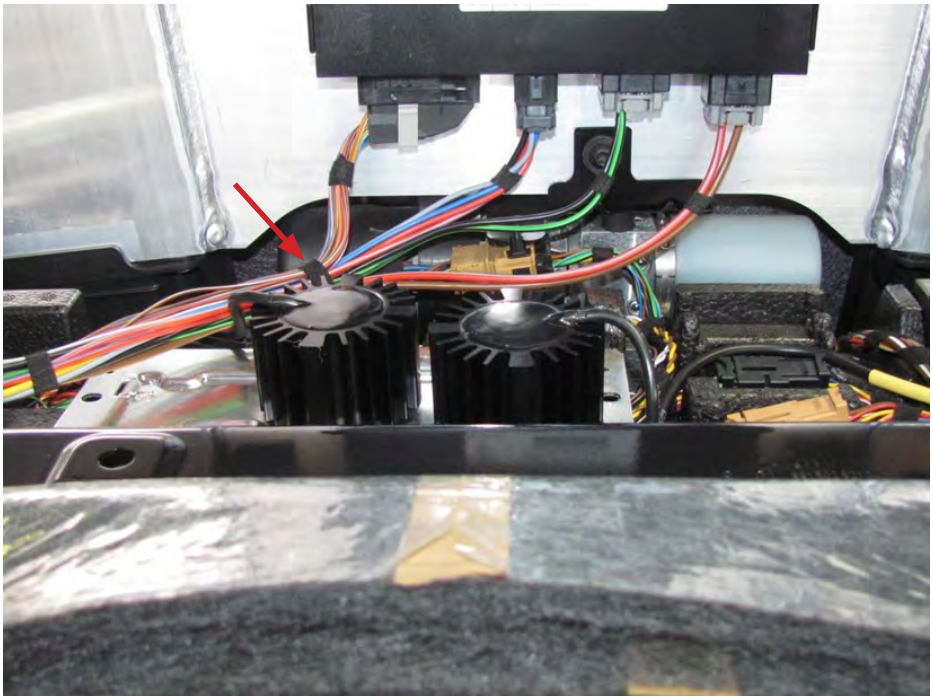

MOUNTING INSTRUCTIONS

Rear axle: Porsche Boxster type 981

1

Fix the supplied adhesive pad on the cancellation kit.

Note!

Adherend must be cleaned and degreased.



Left vehicle side

Assembly position

2

Fasten the cancellation kit to the vehicle frame. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

Note!

Adherend must be cleaned and degreased.



MOUNTING INSTRUCTIONS



3

Fasten the cancellation kit to the vehicle frame and fix it with the supplied cable ties. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

Note!

Adherend must be cleaned and degreased.

MOUNTING INSTRUCTIONS


Rear axle: Porsche 911 Targa type 991

1

Fix the supplied adhesive pad on the cancellation kit.

Note!

Adherend must be cleaned and degreased.

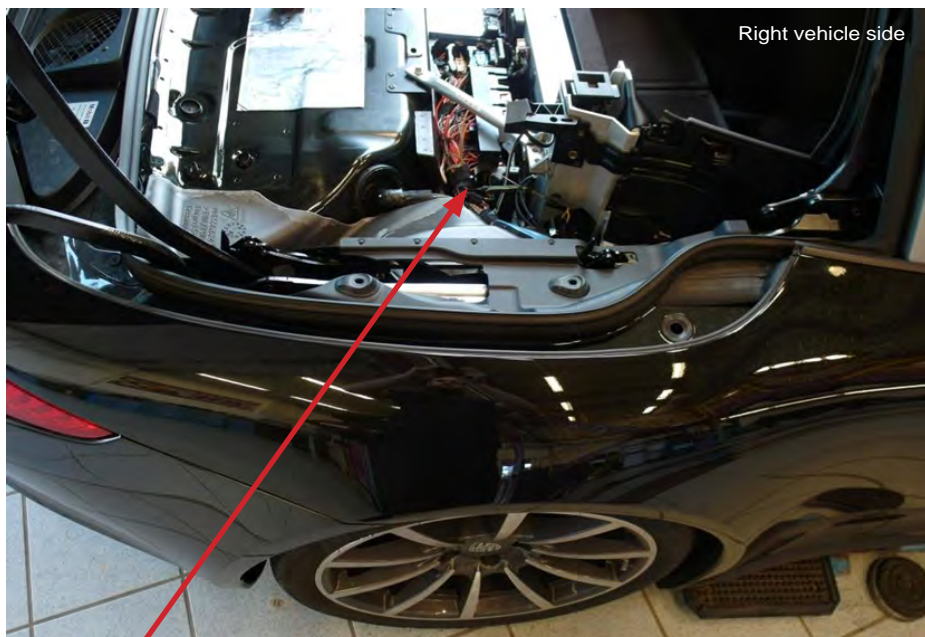

Assembly position

2

Fasten the cancellation kit to the vehicle frame. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

Note!

Adherend must be cleaned and degreased.



MOUNTING INSTRUCTIONS



3

Fasten the cancellation kit to the vehicle frame. Insert the standard connector into the cancellation connector until it locks. Fix the wire with cable ties.

👁 Note!

Adherend must be cleaned and degreased.

👁️ Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_35020-07_0
Issued 2021-06-22

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com