

Kit Contents		
Description	Part No	Pcs
Front canceller		2
Rear canceller		2
Cable ties		6

Note!

Please note that there can be small differences between your product and the images in these instructions.

Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Cancellation kit, Honda Civic Type-R FK2

35020-20

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

Preparation

1

Cut off 150 mm of the standard damper control cable.

2





Remove 15 mm of the cable insulation and 4-5 mm of the wire insulation. Attach the heat shrink tube.

3

Install the supplied pin contact with a correct tool.

4

Insert the completed wire into the connector until to the lock. After this lock the connector and move the heat shrink tube to the middles of the connector/the wire and heat it. The pinposition/cable colour is not relevant.

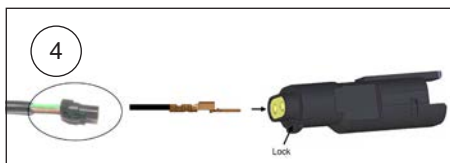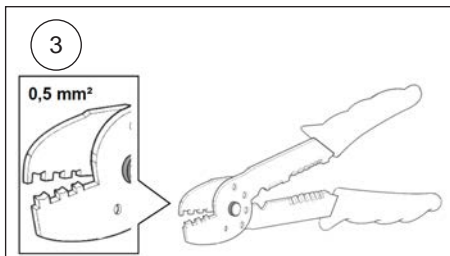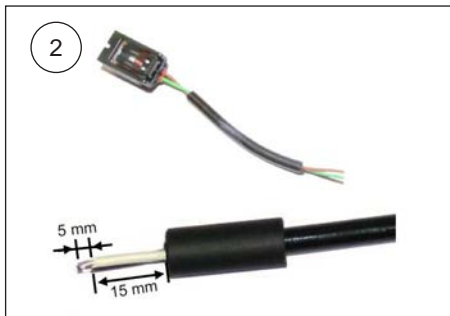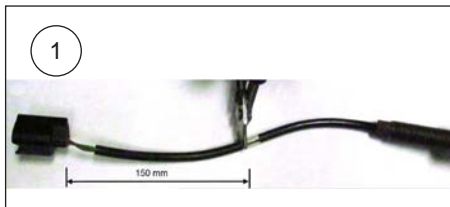

MOUNTING INSTRUCTIONS

Front axle

1


Right vehicle side

Run the standard damper control wire with adapter to the cancellation kit connector. Fix the cancellation kit with edge clips in the shassis edge. Insert the standard connncetor to the cancellation kit connector until it locks. Fix it with cable ties.

2

Left vehicle side

Run the standard damper control wire with adapter to the cancellation kit connector. Fix the cancellation kit with cable ties on the strut. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties.

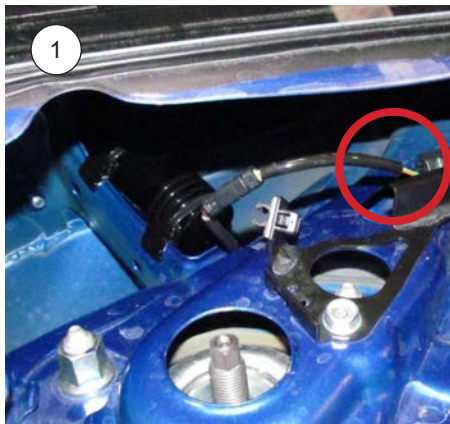

Rear axle

1

Run the standard damper control wire with adapter to the cancellation kit connector. Fix the cancellation kit with cable ties on the cover. Cut a small hole into the cover for the cable tie. Insert the standard connector into the cancellation kit connector until it locks. Fix the wire with cable ties.



Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_35020-20_0
Issued 2018-02-12
Revised 2020-09-10

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com