

👁 Note!

Please note that there can be small differences between your product and the images in these instructions.

👁 Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

👁 Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

⚠ Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Cancellation kit Audi PQ35

35020-22

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

Front axle


Right vehicle side

1

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the front axle electronic kit with the supplied edge clips and cable ties on the chassis edge.

Assembly area front axle electronic kit.

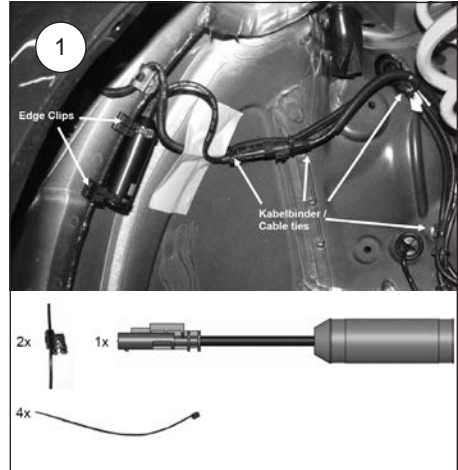

MOUNTING INSTRUCTIONS

Front axle


Left vehicle side

2

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the front axle electronic kit with the supplied edge clips and cable ties on the chassis edge.

Assembly area front axle electronic kit.

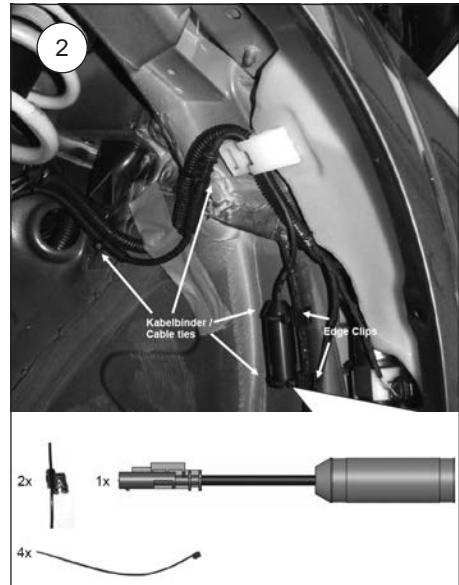

MOUNTING INSTRUCTIONS

Rear axle


Left vehicle side

1

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the rear axle electronic kit with the supplied edge clips and cable ties on the chassis.

Assembly area rear axle electronic kit.

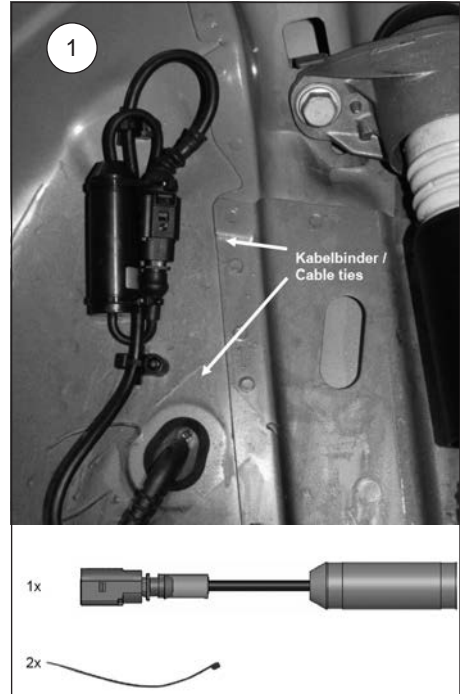

Rear axle


Right vehicle side

2

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the rear axle electronic kit with the supplied edge clips and cable ties on the chassis.

Assembly area rear axle electronic kit.

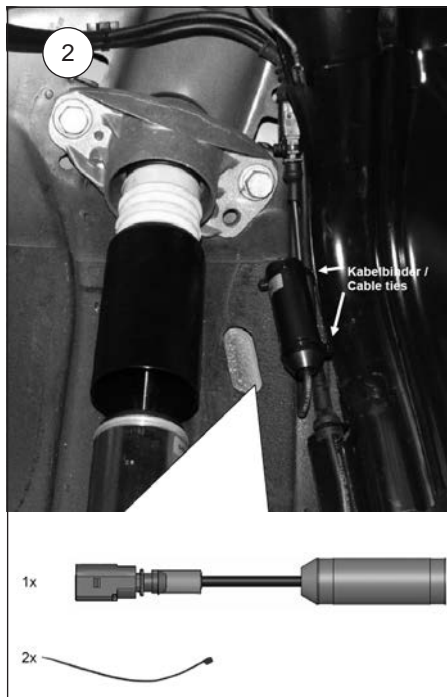

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_35020-22_1
Issued 2018-09-21
Updated 2018-10-23

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com