

Kit Contents

Description	Part No	Pcs
Top cap assembly		2
Washer 17/26.5-3	61123-23	12
Pre-load tube 25.4x1.2x121	60062-22	2
Spring 27/380/8.0	68007-80	2
Tool pin Ø18.5	00797-10	1
Sticker "ÖHLINS"	00192-01	2
Sticker "ÖHLINS"	01185-01	2
Sticker "ÖHLINS"	01185-04	2

Mote!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

▲ Warning!

Öhlins cannot be held responsible for any personal injury or damage that may occur after installing the Öhlins spring kit. We strongly recommend to let an Öhlins authorized service center to install this kit.

▲ Warning!

After you have installed this product, take a test ride at low speed to be sure that your vehicle has maintained stability.

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Fork Spring Kit for Yamaha Xmax 300


FSK 162

Mounting Instructions




MOUNTING INSTRUCTIONS

Original Front Fork assembly

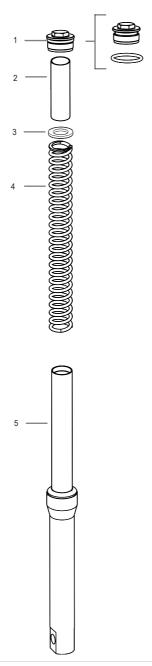

MOUNTING INSTRUCTIONS

Öhlins Front Fork kit assembly

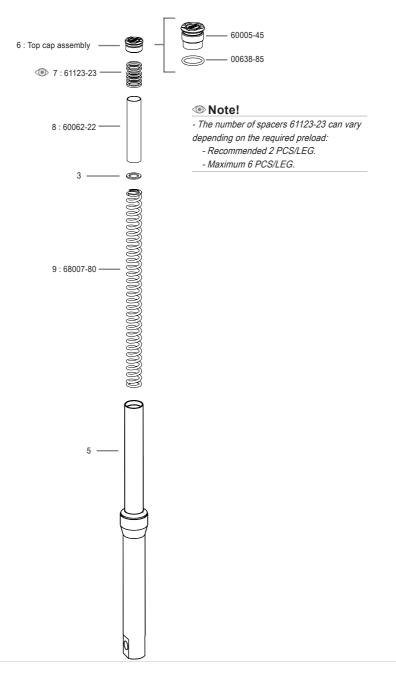

MOUNTING INSTRUCTIONS

Congratulations!

With this purchase you have made a clear statement. This high performance Front Fork spring kit from Öhlins is nothing but pure racing breed which means that you have taken one more step to eliminate luck on your motorcycle.

The balance between your Front Fork and rear suspension will sharpen up and the performance of your Front Fork will improve. Almost 40 years of racing experience is now a crucial part of your riding experience.

Note!

Öhlins FSK 162 spring 68007-80 rate is 8.0 N/mm

Recommended oil

We recommended to use Öhlins high performance Front Fork fluid 01314-01.

Recommended oil level

195 mm.

Note!

The measurement of oil level is taken from the top of the inner tube (5) to the oil surface.

- > The fork leg need to be in vertical position
- > The fork need to be fully compressed
- > The fork must be without the spring and the preload tube

Note!

During the installation of the fork damping kit, please be sure to don't to loose the standard spring washer(3).

How to install

- 1.Put the motorcycle on the work stand so that the front wheel barely touch the ground. Make sure the motorcycle is in a stable position.
- 2.Release the fork tube from the triple clamps.
- 3.Remove the original Top cap (1), Pre-load tube (2), Spring washer (3), and Spring (4)
 - 4. Purge all the oil from both fork legs.
- 5. Fill the Öhlins oil as recommended.
- 6.Insert the Öhlins spring (9), Standard washer (3), Öhlins Pre-load tube (8) and Öhlins washers (7) according to the quantity on page 3.

Note!

To avoid scratches during tightening place some of the packaging blue bag between top cap and pin tool.

7.Tighten the top cap by using the pin tool 00797-10 at torque value ~10N/mm.

00797-10



Reinstall both fork legs as per vehicle service manual instructions.

Ohlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur. To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_FSK162_EN_0 Issued 2021-11-08

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited. Öhlins Asia Co. Ltd 700/937 Moo5, Tambol Nongkhaga, Amphur Phantong, Chonburi Province 20160 Thailand

