


Mounting Instructions

Öhlins shock absorber kit
AP 351 for Aprilia RSV-R 2004

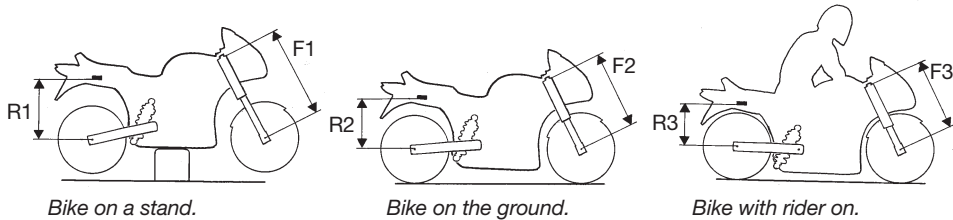

Setup data

| | |
|--------------------------|-------------------|
| Shock absorber length | 313(+3.5/-2.5) mm |
| Shock absorber stroke | 63mm |
| Spring preload | 15 mm |
| Rebound damping adjuster | 20 clicks |
| Compression damping adj. | 12 clicks |


Checking sag and ride height

| | |
|--|-----------------|
| Front suspension | |
| F1. Bike on a stand with the suspension fully extended | = |
| F2. Bike on the ground <u>without</u> rider | = |
| F3. Bike on the ground <u>with</u> rider | = |
| Free sag | F1 - F2 = |
| Ride height | F1 - F3 = |


| | |
|--|-----------------|
| Rear suspension | |
| R1. Bike on a stand with the suspension fully extended | = |
| R2. Bike on the ground <u>without</u> rider | = |
| R3. Bike on the ground <u>with</u> rider | = |
| Free sag | R1 - R2 = |
| Ride height | R1 - R3 = |

WARNING!

If the shock absorber has an adjustable end eye/bracket, this must not be treaded out more than that one groove is fully visible beneath the lock nut. Make sure that the lock nut is tightened after adjustment.

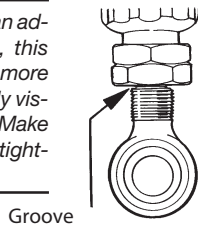

Groove

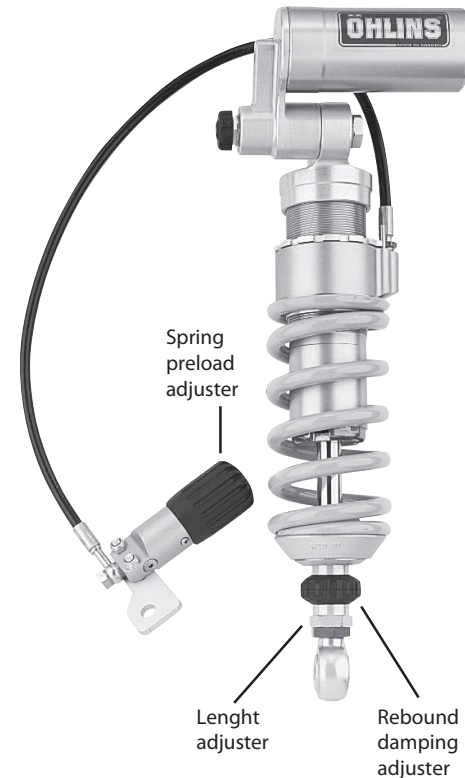

Öhlins shock absorber 46 PRCLS

Your Öhlins shock absorber type 46 PRCLS features the following adjusters:

Compression damping adjuster

Adjustments are made on top of the reservoir.

Rebound damping adjuster

Adjuster wheel on the piston shaft above the end bracket.

Spring preload adjuster

Adjustments are made by turning the knob on the hydraulic adjuster. Clockwise for harder adjustment, counter clockwise too release the preload.

Length adjuster

Adjustment is made by turning the end eye and tightening with the lock nut.

NOTE!

When delivered the Öhlins shock absorber is dialed to recommended settings for the specific brand and make of the motorcycle. If you have changed the settings, check like this:

The adjusters have a normal right hand thread. Turn the damping adjusters clockwise to fully closed (pos. zero [0]). Turn counter clockwise to open and count the clicks until you reach the recommended number of clicks. See Setup data at last page.

CAUTION!

Do not use too much force, delicate sealing surfaces can be damaged.



Öhlins Racing AB, Box 722, S-194 27 Upplands Väsby, Sweden.
Phone +46 8 590 025 00. Fax +46 8 590 025 80.
www.ohlins.com

Part No. AP 351_2. Issued 071001

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited. Printed in Sweden.



Safety signals

Important information concerning safety is distinguished in this manual by the following notations:



The Safety alert symbol means:
Caution! Your safety is involved.

WARNING!

Failure to follow warning instructions could result in severe or fatal injury to anyone working with, inspecting or using the suspension, or to bystanders.

CAUTION!

Caution indicates that special precautions must be taken to avoid damage to the suspension.

NOTE!

This indicates information that is of importance with regard to procedures.

Öhlins products are subject to continual improvement and development. Consequently, although these instructions include the most up-to-date information available at the time of printing, there may be minor differences between your suspension and this manual. Please consult your Öhlins dealer if you have any questions with regard to the contents of the manual.

NOTE!

During storage and transportation, especially at high ambient temperature, the oil and grease used for assembling may run out inside the packing and damage the expanded polystyrene packing material. This is not unusual and is in no way detrimental to the shock absorber.

Kit contents

Before installing the shock absorber, please check the contents of the kit. If anything is missing, contact your Öhlins dealer.

| Description | Pcs. | Part No. |
|-------------------------|------|----------|
| Shock absorber 46 PRXLS | 1 | AP 351 |
| Tie-rop | 2 | 00231-01 |
| Sticker memo notes | 1 | 01180-01 |
| Sticker Öhlins | 2 | 00192-01 |
| Owners manual | 1 | |

Before installation

Öhlins Racing AB can not be held responsible for any damage whatsoever to shock absorber or vehicle, or injury to persons, if the instructions for fitting and maintenance are not followed exactly.

Similarly, the warranty will become null and void if the instructions are not adhered to.

WARNING!

1. Installing a shock absorber, that is not approved by the vehicle manufacturer, may affect the stability of your vehicle. Öhlins Racing AB cannot be held responsible for any personal injury or damage whatsoever that may occur after fitting the shock absorber. Contact an Öhlins dealer or other qualified person for advice.

2. Please study and make certain that you fully understand all the mounting instructions and the owners manuals before handling this shock absorber kit. If you have any questions regarding proper installation procedures, contact an Öhlins dealer or other qualified person.

3. The vehicle service manual must be referred to when installing the Öhlins shock absorber

Mounting instructions

1

Put the motorcycle on a stand so the rear wheel is clear of the ground. Make sure it's steadily fixed so it will not fall over.

WARNING!

1. It's advisable to have an Öhlins dealer or other qualified person to fit your shock absorber.
2. Instructions in the vehicle service manual are to be followed when changing the shock absorber.
3. When working on a lifted vehicle it must be securely supported to prevent it from falling.

2

Loosen first the lower and then the upper bolts of the original shock absorber and remove them. The absorber is removed by lifting it upwards and out at any side of the bike.

3

Fit the Öhlins shock absorber in reverse order. The piggyback towards the wheel. Fasten it by using the two original bolts.

4

Attach the hydraulic preload adjuster to the wheel side of the right silencer bracket by using the original bolt

5

Fit the hose on the backside of the silencer bracket on the right side of the motorcycle. Tie up the hose by putting the tie rap around the bracket behind the front upper bolt.

NOTE!

Make sure that all bolts are tightened to the correct torque and that nothing fouls the shock absorber when the suspension is being compressed. See: Motorcycle workshop manual.

Check with the Service Manual of the motorbike.

6

Continue your work according to the Owners Manual, section Adjustments

This particular model has an adjustable end eye/bracket. The eye/bracket must not be treated over more than that one groove is fully visible beneath the lock nut. Make sure that the lock nut is tightened after adjustment

NOTE!

Make sure that all bolts are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.

