



Kit Contents

Description	Part No	Pcs
Shock absorber	OPV1-4E00	4
Reservoir mounts	00230-01	8
Hose clamp	00643-02	8
Tie raps	00231-01	8
C-spanner	00710-01	2
Sticker	00192-01	4
Owner's manual	07440-01	1
OPV1E00	Left-Front	
OPV2E00	Right-Front	
OPV3E00	Left-Rear	
OPV4E00	Right-Rear	

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

👁 Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

👁 Note!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber/front fork/steering damper is an important part of your vehicle and will affect the stability.

Shock absorber kit for Opel Speedster Front and Rear

OPV 1-4E00

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber/front fork/steering damper.

⚠ Warning!


If working on a raised vehicle, ensure it is securely supported so that it will not tip.

👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.

Mounting Instructions - Front


- 1 Remove the wheel and loosen the upper and lower mounts of the wheel stem.
- 2 Loosen the mounts of the shock absorber and remove the original shock absorber up.
- 3 Install the Öhlins shock absorber.

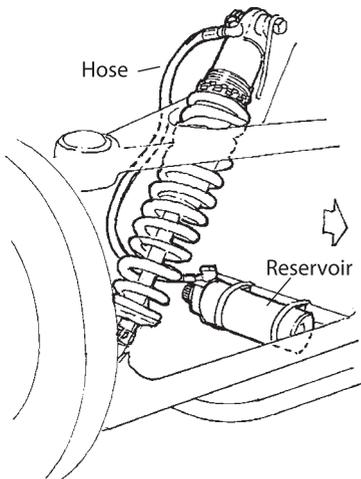

- 4 Fit the rubber mounts and the reservoir to the inside tube of the lower triangle link. Use the hose clamps provided to fix the reservoir.

👁 Note!

Let the hose go in soft turns and make sure that nothing restricts or interferes with the shock absorber when the wheels are moving.

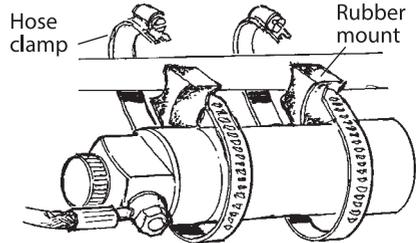


Mounting of reservoir

- 5 Refit the wheel stem and the wheel.

Mounting Instructions - Rear

- 1 Remove the wheel and loosen the upper and lower mounts of the wheel stem.
- 2 Loosen the mounts of the shock absorber and remove the original shock absorber up.
- 3 Install the Öhlins shock absorber.

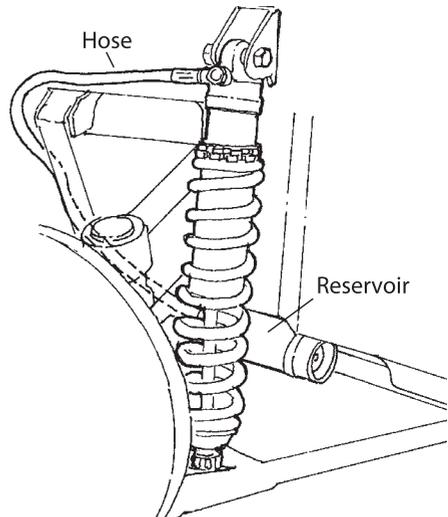

MOUNTING INSTRUCTIONS

4

Fit the rubber mounts and the reservoir to the inside tube of the lower triangle link. Use the hose clamps provided to fix the reservoir.

 **Note!**

Let the hose go in soft turns and make sure that nothing restricts or interferes with the shock absorber when the wheels are moving.

5

Refit the wheel stem and the wheel.


 **Caution!**

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber/front fork/steering damper when the suspension is fully compressed or extended.

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

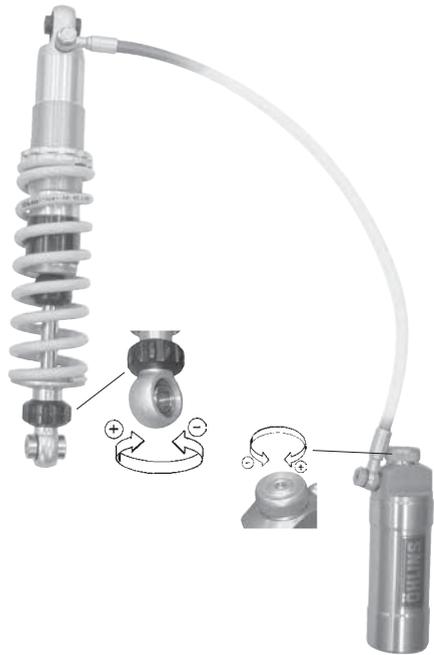

SET-UP DATA

Rebound	13	clicks
Compression	8	clicks
Spring preload, front	2	mm
Spring preload, rear	2	mm

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_OPV1-4E00_0
Issued 2004-11-01



© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com